

# User's Manual

# FlexScan®

## S1701

## S1721

## S1731

## S1901

## S1911

## S1921

## S1931

Color LCD Monitor

### Important

Please read this User's Manual, Setup Manual (separate volume) and Specifications Sheet carefully to familiarize yourself with safe and effective usage.

### PRECAUTIONS

#### Chapter 1 Features and Overview

- 1-1 Features
- 1-2 Buttons and Indicators
- 1-3 Functions and Basic Operation

#### Chapter 2 Settings and Adjustments

- 2-1 Utility Disk
- 2-2 Screen Adjustment
- 2-3 Color Adjustment
- 2-4 Off Timer Settings
- 2-5 Power Indicator/EIZO Logo Display Setting
- 2-6 Locking Buttons
- 2-7 Setting Adjustment menu Display
- 2-8 Viewing Information/Setting Language
- 2-9 Setting BrightRegulator
- 2-10 Resumption of Default Setting

#### Chapter 3 Connecting Cables

- 3-1 Connecting Two PCs to the Monitor

#### Chapter 4 Troubleshooting

#### Chapter 5 Reference

- 5-1 Attaching an Arm (Option)
- 5-2 Power Saving Mode
- 5-3 Cleaning
- 5-4 Glossary
- 5-5 Preset Timing

#### How to Setup

Please read the Setup Manual (separate volume)





#### Specifications

Please read the Specifications Sheet on the CD-ROM.



# SAFETY SYMBOLS

This manual uses the safety symbols below. They denote critical information. Please read them carefully.

|   |  |   |   |
|---|--|---|---|
|  | <b>WARNING</b><br>Failure to abide by the information in a WARNING may result in serious injury and can be life threatening. |  | <b>CAUTION</b><br>Failure to abide by the information in a CAUTION may result in moderate injury and/or property or product damage. |
|  | Indicates a prohibited action.   |   |   |
|  | Indicates a mandatory action that must be followed.  |   |   |

---

Copyright© 2006-2010 EIZO NANA O CORPORATION All rights reserved.

No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of EIZO NANA O CORPORATION. EIZO NANA O CORPORATION is under no obligation to hold any submitted material or information confidential unless prior arrangements are made pursuant to EIZO NANA O CORPORATION's receipt of said information. Although every effort has been made to ensure that this manual provides up-to-date information, please note that EIZO monitor specifications are subject to change without notice.

---

Apple and Macintosh are registered trademarks of Apple Computer, Inc.  
VGA is a registered trademark of International Business Machines Corporation.  
VESA is a registered trademark of Video Electronics Standards Association.  
Windows is a registered trademark of Microsoft Corporation.  
EIZO, EIZO Logo, FlexScan and ScreenManager are registered trademarks of EIZO NANA O CORPORATION.  
All other trademarks are the properties of their respective owners.

|  |
|--|
| <p>Product specification may vary with sales areas.<br/>Confirm the specification in the manual written in language of the region of purchase.</p> |
|--|


# ⚠ PRECAUTIONS

## IMPORTANT

- This product has been adjusted specifically for use in the region to which it was originally shipped. If the product is used outside the region, it may not operate as specified in the specifications.
- To ensure personal safety and proper maintenance, please read carefully this section and the caution statements on the monitor.

## [Location of Caution Statement]

(Example of height adjustment stand)

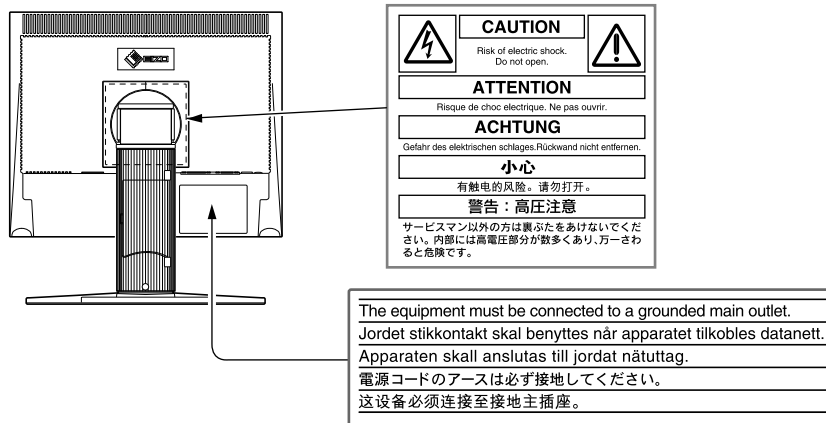

## ⚠ WARNING

**If the unit begins to emit smoke, smells like something is burning, or makes strange noises, disconnect all power connections immediately and contact your dealer for advice.**

Attempting to use a malfunctioning unit may result in fire, electric shock, or equipment damage.

**Do not open the cabinet or modify the unit.**

Opening the cabinet or modifying the unit may result in fire, electric shock, or burn.




**Refer all servicing to qualified service personnel.**

Do not attempt to service this product yourself as opening or removing covers may result in fire, electric shock, or equipment damage.

**Keep small objects or liquids away from the unit.**

Small objects accidentally falling through the ventilation slots into the cabinet or spillage into the cabinet may result in fire, electric shock, or equipment damage.

If an object or liquid falls/spills into the cabinet, unplug the unit immediately. Have the unit checked by a qualified service engineer before using it again.

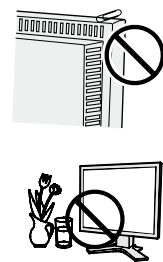

## **WARNING**

---

### **Place the unit at the strong and stable place.**


A unit placed on an inadequate surface may fall and result in injury or equipment damage. If the unit falls, disconnect the power immediately and ask your dealer for advice. Do not continue using a damaged unit. Using a damaged unit may result in fire or electric shock.



### **Set the unit in an appropriate location.**

Not doing so may result in fire, electric shock, or equipment damage.

- Do not place outdoors.
- Do not place in the transportation system (ship, aircraft, trains, automobiles, etc.)
- Do not place in a dusty or humid environment.
- Do not place in a location where the steam comes directly on the screen.
- Do not place near heat generating devices or a humidifier.

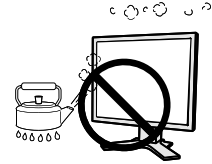

### **To avoid danger of suffocation, keep the plastic packing bags away from babies and children.**

---

### **Use the enclosed power cord and connect to the standard power outlet of your country.**

Be sure to remain within the rated voltage of the power cord.

Not doing so may result in fire or electric shock.

### **To disconnect the power cord, grasp the plug firmly and pull.**

Tugging on the cord may damage and result in fire or electric shock.



### **The equipment must be connected to a grounded main outlet.**

Failure to do so may result in fire or electric shock.



### **Use the correct voltage.**

- The unit is designed for use with a specific voltage only. Connection to another voltage than specified in this User's Manual may cause fire, electric shock, or equipment damage.
  - Do not overload your power circuit, as this may result in fire or electric shock.
-

## **WARNING**

---

### **Handle the power cord with care.**

- Do not place the cord underneath the unit or other heavy objects.
- Do not pull on or tie the cord.

If the power cord becomes damaged, stop using it. Use of a damaged cord may result in fire or electric shock.



---

### **Never touch the plug and power cord if it begins to thunder.**

Touching them may result in electric shock.

---

### **When attaching an arm stand, please refer to the user's manual of the arm stand and install the unit securely.**

Not doing so may cause the unit to become unattached, which may result in injury or equipment damage. When the unit is dropped, please ask your dealer for advice. Do not continue using a damaged unit. Using a damaged unit may result in fire or electric shock. When reattaching the tilt stand, please use the same screws and tighten them securely.

---

### **Do not touch a damaged LCD panel directly with bare hands.**

The liquid crystal that may leak from the panel is poisonous if it enters the eyes or mouth. If any part of the skin or body comes in direct contact with the panel, please wash thoroughly. If some physical symptoms result, please consult your doctor.



---

### **Follow local regulation or laws for safe disposal.**

The backlight of the LCD panel contains mercury.

---

## CAUTION

---


### **Handle with care when carrying the unit.**

Disconnect the power cord and cables when moving the unit. Moving the unit with the cord attached is dangerous. It may result in injury.

---

### **When handling the unit, grip the bottom of the unit firmly with both hands ensuring the panel faces outward before lifting.**

Dropping the unit may result in injury or equipment damage.

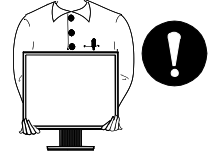

### **Do not block the ventilation slots on the cabinet.**

- Do not place any objects on the ventilation slots.
- Do not install the unit in a closed space.
- Do not use the unit laid down or upside down.

Blocking the ventilation slots prevents proper airflow and may result in fire, electric shock, or equipment damage.



### **Do not touch the plug with wet hands.**

Doing so may result in electrical shock.



### **Use an easily accessible power outlet.**

This will ensure that you can disconnect the power quickly in case of a problem.

---

### **Periodically clean the area around the plug.**

Dust, water, or oil on the plug may result in fire.

---

### **Unplug the unit before cleaning it.**

Cleaning the unit while it is plugged into a power outlet may result in electric shock.

---

**If you plan to leave the unit unused for an extended period, disconnect the power cord from the wall socket after turning off the power switch for the safety and the power conservation.**

---

## LCD Panel

---

In order to suppress the luminosity change by long-term use and to maintain the stable luminosity, use of a monitor in lower brightness is recommended.

---

The LCD panel is manufactured using high-precision technology. However, note that the appearance of any missing pixels or lit pixels does not indicate damage to the LCD monitor.

Percentage of effective pixels: 99.9994% or higher.

---

The backlight of the LCD panel has a fixed life span. When the screen becomes dark or begins to flicker, please contact your dealer.

---

Do not press on the panel or edge of the frame strongly, as this may result in damage to the screen. There will be prints left on the screen if the pressed image is dark or black. If pressure is repeatedly applied to the screen, it may deteriorate or damage your LCD panel. Leave the screen white to decrease the prints.

---

Do not scratch or press on the panel with any sharp objects, such as a pencil or pen as this may result in damage to the panel. Do not attempt to brush with tissues as this may scratch the LCD panel.

---

When the monitor is cold and brought into a room or the room temperature goes up quickly, dew condensation may occur inside and outside the monitor. In that case, do not turn the monitor on and wait until dew condensation disappears, otherwise it may cause damage to the monitor.

---

## To use the monitor comfortably

---

An excessively dark or bright screen may affect your eyes. Adjust the brightness of the monitor according to the environmental conditions.

---

Staring at the monitor for a long time tires your eyes. Take a 10-minute rest every hour.

---

# CONTENTS

|   |           |   |           |
|---|-----------|---|-----------|
| <b>PRECAUTIONS</b> .....                                | <b>1</b>  | <b>2-6 Locking Buttons</b> .....                      | <b>17</b> |
| LCD Panel.....  | 5         | • To lock operation [Adjustment Lock].....            | 17        |
| To use the monitor comfortably .....                    | 5         | <b>2-7 Setting Adjustment menu Display</b> .....      | <b>17</b> |
| <b>Chapter 1 Features and Overview</b> .....            | <b>7</b>  | • To update menu settings [Menu Position] .....       | 17        |
| <b>1-1 Features</b> .....                               | <b>7</b>  | <b>2-8 Viewing Information/Setting Language</b> ..... | <b>18</b> |
| <b>1-2 Buttons and Indicators</b> .....                 | <b>7</b>  | • To check viewing information, usage time, etc. 18   |           |
| <b>1-3 Functions and Basic Operation</b> .....          | <b>8</b>  | • To set a language to be displayed [Language]. 18    |           |
| <b>Chapter 2 Settings and Adjustments</b> .....         | <b>10</b> | <b>2-9 Setting BrightRegulator</b> .....              | <b>18</b> |
| <b>2-1 Utility Disk</b> .....                           | <b>10</b> | • [BrightRegulator] to set “Enable” or “Disable” for  |           |
| • Disk contents and software overview .....             | 10        | BrightRegulator.....                                  | 18        |
| • To use ScreenManager Pro for LCD (USB model           |           | <b>2-10 Resumption of Default Setting</b> .....       | <b>18</b> |
| of S1721/S1731/S1921/S1931).....                        | 10        | • To reset color adjustment [Reset].....              | 18        |
| <b>2-2 Screen Adjustment</b> .....                      | <b>11</b> | • To reset all settings [Reset] .....                 | 18        |
| Digital Input.....                                      | 11        | <b>Chapter 3 Connecting Cables</b> .....              | <b>19</b> |
| Analog Input .....                                      | 11        | <b>3-1 Connecting Two PCs to the Monitor</b> .....    | <b>19</b> |
| <b>2-3 Color Adjustment</b> .....                       | <b>14</b> | <b>Chapter 4 Troubleshooting</b> .....                | <b>20</b> |
| Simple adjustment [FineContrast mode] .....             | 14        | <b>Chapter 5 Reference</b> .....                      | <b>22</b> |
| • FineContrast Mode.....                                | 14        | <b>5-1 Attaching an Arm (Option)</b> .....            | <b>22</b> |
| Advanced Adjustments [Adjustment menu].....             | 15        | <b>5-2 Power Saving Mode</b> .....                    | <b>23</b> |
| • To select an appropriate mode for images .....        | 15        | <b>5-3 Cleaning</b> .....                             | <b>23</b> |
| • To set/adjust color .....                             | 15        | <b>5-4 Glossary</b> .....                             | <b>24</b> |
| <b>2-4 Off Timer Settings</b> .....                     | <b>16</b> | <b>5-5 Preset Timing</b> .....                        | <b>25</b> |
| • To set monitor power-off time [Off Timer] .....       | 16        |   |           |
| <b>2-5 Power Indicator/EIZO Logo Display Setting</b> 16 |           |   |           |
| • To turn off the Power indicator while a screen is     |           |   |           |
| displayed [Power Indicator Setting].....                | 16        |   |           |
| • To display EIZO logo                                  |           |   |           |
| [EIZO Logo Hiding Function].....                        | 16        |   |           |



# Chapter 1 Features and Overview

Thank you very much for choosing an EIZO color LCD monitor.

## 1-1 Features

- Dual-input compliant (DVI-D and D-sub mini 15-pin connectors)
- DVI digital input (TMDS) compliant
- Horizontal scan frequency: Analog: 24.8 - 80 kHz, Digital: 31 - 64 kHz
- Vertical scan frequency: Analog: 50 - 75 Hz

Digital: 59 - 61 Hz (VGA text: 69 - 71 Hz)


Resolution: 1280 dots × 1024 lines

- Stereo speakers\*<sup>1</sup>
- BrightRegulator function incorporated
- FineContrast mode to allow the best mode for screen display
- Ultra slim bezel

### NOTE

- The stand of the unit can be replaced with an arm or another stand. (Refer to “5-1 Attaching an Arm” on page 22.)

## 1-2 Buttons and Indicators

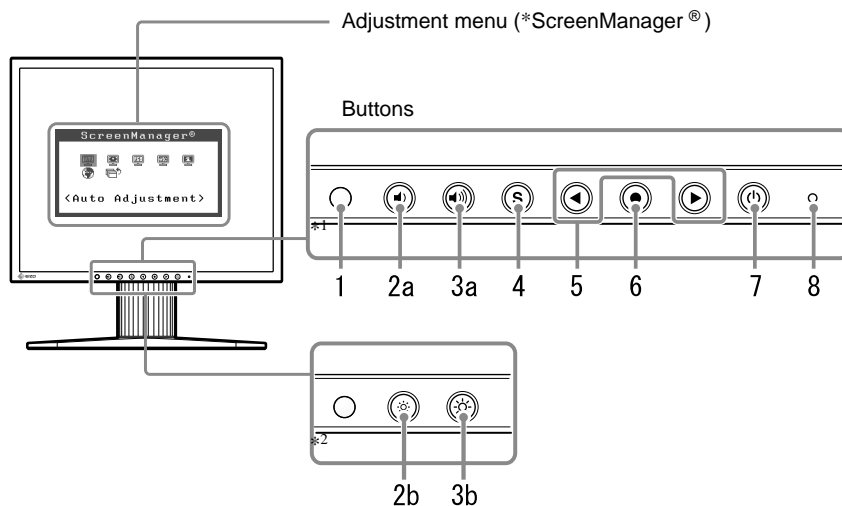

1. Sensor (BrightRegulator)
- 2a. Volume control button [turn down]\*<sup>1</sup>
- 2b. Brightness control button [turn down]\*<sup>2</sup>
- 3a. Volume control button [turn up]\*<sup>1</sup>
- 3b. Brightness control button [turn up]\*<sup>2</sup>
4. Input signal selection button
5. Control buttons (Left, Right)
6. Enter button
7. Power button
8. Power indicator

| Indicator status | Operation status        |
|------------------|-------------------------|
| Blue             | The screen is displayed |
| Orange           | Power saving            |
| Off              | Power off               |

\* ScreenManager<sup>®</sup> is an EIZO's nickname of the Adjustment menu.

### NOTE


- When “Off Timer” set, the power indicator blinks 15 minutes before the set time. (Refer to “To set monitor power-off time” on page 16.)

\*<sup>1</sup> Speaker applied model

\*<sup>2</sup> Speaker non-applied model

# 1-3 Functions and Basic Operation

## To adjust the screen and color

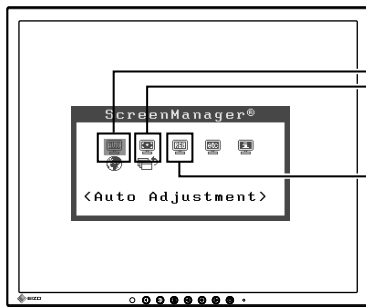

● Adjustment menu (Refer to page 9 for operation)  
(for analog signal input only)

### 1 Screen Adjustment (Automatic Adjustment) Page 11

Auto Adjustment

<Screen>

- [Screen] to adjust flickering and position ..... see page 11
- [Range] to adjust color gradation automatically ..... see page 13

● Adjustment menu (Refer to page 9 for operation)

### Color Adjustment Page 14

#### Advanced Adjustment [Adjustment menu]

Color (Custom)

<Brightness>

- “Brightness,” “Temperature,” and “Gain” can be set for each mode (Custom/sRGB/Text). Settable functions vary with the display mode.

**Resuming the default settings**

- Reset color adjustment [Reset] ..... see page 18

● Adjustment menu (Refer to page 9 for operation)  
(for analog signal input only)

### 2 Screen Adjustment (Advanced Adjustment) [Adjustment menu] Page 11

Screen

<Clock>

- [Clock] to remove vertical bars ..... see page 12
- [Phase] to remove horizontal flickering and blur/distortion ..... see page 12
- [Position] to correct screen position  
[Hor. Position] ..... see page 12  
[Ver. Position] ..... see page 12

#### Shortcut button operation

#### Brightness Adjustment\*1 Page 15

Press ◀ or ▶ to adjust brightness.

#### Brightness Adjustment\*2 Page 15

Press ☀ or ☀ to adjust brightness.


#### Volume Adjustment\*1

Press 🔊 or 🔊 to adjust volume.

\*1 :Speaker applied model

\*2 :Speaker non-applied model

## To make useful settings/adjustments

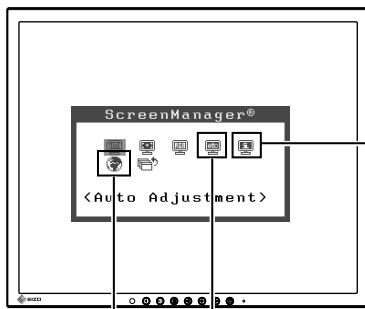

● Adjustment menu (Refer to below for operation)

### Information

Page 18

#### Information(1/2)

```
Input Analog
1280x1024
fH: 80.0KHz
fV: 75.0Hz
```

- [Information] to check displayed input signals, monitor information, usage time, etc.

● Adjustment menu (Refer to below for operation)

### Language

Page 18

- [Information] to check settings, usage time, etc.

```
Language
●English   ○Deutsch
○Français ○Español
○Italiano ○Svenska
○简体中文 ○繁體中文
○日本語
```

- [Language] to select Adjustment menu language.



### Set the off timer

- [Off Timer] to set the monitor power off time ..... see page 16

### Adjustment menu settings

- [Menu Position] to change Adjustment menu settings ..... see page 17

### Power Indicator Setting

- [Power Indicator Setting] to turn off the indicator while the screen is displayed..... see page 16

### BrightRegulator setting

- [BrightRegulator] to set Enable/ Disable of BrightRegulator ..... see page 18

### Resume the factory default settings

- [Reset] to reset all settings ..... see page 18

### EIZO Logo Display Setting

Page 16

- [EIZO Logo Appearing Function] to display or not to display the EIZO logo

### Locking Adjustment

Page 17

- [Adjustment Lock] to lock operation of the monitor

### Connecting Cables

Page 19

- Connecting Two PCs to the Monitor

## Basic operation of Adjustment menu

### [Displaying Adjustment menu and selecting function]

- (1) Press ●. The main menu appears.
- (2) Select a function with ◀ or ▶, and press ●. The sub menu appears.
- (3) Select a function with ◀ or ▶, and press ●. The adjustment/setting menu appears.
- (4) Adjust the selected item with ◀ or ▶, and press ●. The setting is saved.

### [Exiting Adjustment menu]

- (1) Choose ⏪ <Return> from the sub menu and press ●.
- (2) Choose ⏪ <Exit> from the main menu and press ●.

#### NOTE

- The Adjustment menu can also be exited by pressing ● twice quickly.

# Chapter 2 Settings and Adjustments

## 2-1 Utility Disk

An “EIZO LCD Utility Disk” (CD-ROM) is supplied with the monitor. The following table shows the disk contents and the overview of the application software programs.

- **Disk contents and software overview**

The disk includes a monitor information file, application software programs for adjustment, and User’s Manual. Refer to “readme.txt” or the “Readme” file on the disk for software startup procedures or file access procedures.

| Item  | Overview   | For Windows | For Macintosh |
|---|--|-------------|---------------|
| A “readme.txt” or “Readme” file   |  | ○           | ○             |
| Monitor information file (INF file)   | Available for setting the best resolution and refresh rate for the monitor.  | ○           | —             |
| Color Profiles (ICC Profiles)   | Color profiles   | ○           | ○             |
| Screen Adjustment Program   | Available for easy adjustments of the monitor screen following adjustment patterns and procedures on the screen.   | ○           | ○             |
| ScreenManager Pro for LCD (for Windows) application software (USB model of S1721/S1731/S1921/S1931) | A utility software program to control monitor adjustments from a PC using its mouse and keyboard. (A PC must be connected to the monitor with the supplied USB cable.) Refer to the description later. | ○           | —             |
| User’s Manual of this monitor (PDF file), Specifications Sheet (PDF file)                           |  |             |               |


- **To use ScreenManager Pro for LCD (USB model of S1721/S1731/S1921/S1931)**

For the installation and use of ScreenManager Pro for LCD, refer to its User’s Manual on the disk.

To adjust the monitor using ScreenManager Pro for LCD, connect a PC to the monitor with the supplied USB cable.

**[Connection]**

- (1) Connect the USB port (downstream) of a USB compatible PC (or other USB hub) and the monitor’s USB port (upstream) with the supplied USB cable.
- (2) The USB function is set up automatically upon connection of the USB cable.

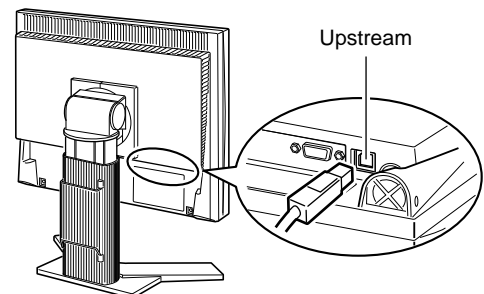

## 2-2 Screen Adjustment

### Digital Input

When digital signals are input, images are displayed correctly based on the preset data of the monitor.

### Analog Input

The monitor screen adjustment is used to suppress flickering of the screen or adjust screen position and screen size correctly according to the PC to be used. To use the monitor comfortably, adjust the screen when the monitor is set up for the first time or when the settings of the PC in use are updated.




**The auto-adjustment function works in the following cases:**

- When a signal is input into the monitor for the first time
- When a signal is input into the monitor for the first time after the resolution or refresh rate of input signals is changed

#### [Adjustment Procedure]

##### ■ Automatic Adjustment

### 1 To adjust screen automatically [Screen]

- (1) Choose  <Screen> from the <Auto Adjustment> menu, and press .
- (2) Choose <Execute>, and Press .
- (3) Flickering, screen position, and screen size are corrected by the auto-adjustment function.

**If satisfactory adjustment cannot be obtained with the auto-adjustment function, perform the adjustment following the procedure below. When the screen is displayed correctly, go to step 4 “Range Adjustment”.**

##### ■ Advanced Adjustment

### 2 Run the Screen Adjustment Program.

Load the EIZO LCD Utility Disk on the PC, and start the Screen Adjustment Program compatible with the PC in use.

After the program starts up, perform the adjustment in step 3 following the instructions of the program.

#### Attention

- Wait 30 minutes or more from monitor power on before starting adjustments.

#### NOTE


- Use “Screen Adjustment Program” on the supplied EIZO LCD Utility Disk.

#### Attention

- This function works correctly when an image is fully displayed over the Windows or Macintosh display area. It does not work properly when an image is displayed only on a part of the screen (DOS prompt window, for example) or when a black background (wallpaper, etc.) is in use.
- This function does not work correctly with some graphics boards.
- “Auto in Progress” appears on the screen during auto adjustment.



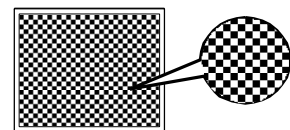


#### NOTE


- For how to start the Screen Adjustment Program, refer to “readme.txt” or the “Readme” file. When you are using a Windows PC, you can run the program directly from the start menu of the disk.
- If no adjustment program is available for your PC, display a checkerboard pattern on the screen (see below) and go to the following steps.








### 3 Perform advanced adjustments for the following using the <Screen> menu of the Adjustment menu.

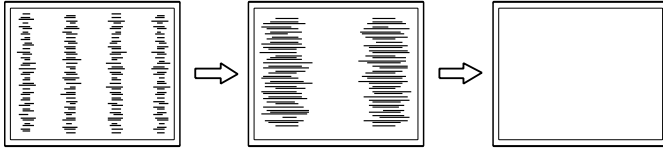
- **To eliminate vertical bars [Clock]**

- (1) Choose  <Clock> from the <Screen> menu, and press .  
The <Clock> menu appears.
- (2) Adjust the clock with  or , and press .  
The adjustment is completed.





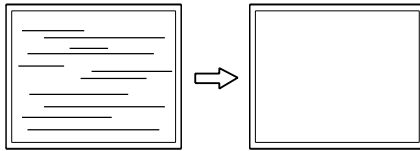


- **To remove flickering or blurring [Phase]**


- (1) Choose  <Phase> from the <Screen> menu, and press .  
The <Phase> menu appears.
- (2) Adjust the phase with  or , and press .  
The adjustment is completed.



- **To correct screen position [Horizontal Position], [Vertical Position]**

Since the number of pixels and the pixel positions are fixed on the LCD monitor, only one position is provided to display images correctly. The position adjustment is made to shift an image to the correct position.

- (1) Choose  <Hor. Position> and or  <Ver. Position> from the <Screen> menu, and press .  
The <Hor. Position> or <Ver. Position> menu appears.
- (2) Adjust the position with  or  to display the image properly in the display area of the monitor.

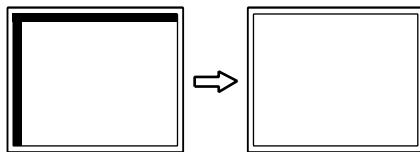

#### NOTE

- Press the control button slowly so as not to miss the adjustment point.
- When blurring, flickering or bars appear on the screen after adjustment, proceed to [Phase] to remove flickering or blurring.

#### Attention

- Flickering or blurring may not be eliminated depending on your PC or graphics board.




#### NOTE

- When vertical bars appear on the screen after adjustment, go back to “To eliminate vertical bars [Clock].” (Clock → Phase → Position)

## 4 Adjust the signal output range

- **To adjust color gradation automatically [Range Adjustment]**

Every color gradation (0 to 255) can be displayed by adjusting the signal output level.

- (1) Choose  <Range> from the <Auto Adjustment> menu, and press .
- (2) Choose <Execute>, and press .
- (3) Color gradation is adjusted correctly by the auto-adjustment function.


The output range is adjusted automatically to display images with the maximum color gradation.

All the adjustments using the “Screen Adjustment Program” are completed.

## 2-3 Color Adjustment

### Simple adjustment [FineContrast mode]

This function allows you to select the best display mode for monitor brightness, etc.

- (1) Choose  <Color Mode> from the <Color> menu.
- (2) Choose [Custom], [sRGB] or [Text] with ◀ or ▶, and press ●.

- **FineContrast Mode**

An appropriate display mode is selectable out of three modes.

| Mode   | Purpose  |
|--------|--|
| Custom | Available for making desired setting.                              |
| sRGB   | Suitable for color matching with sRGB compatible peripherals.      |
| Text   | Suitable for displaying texts for word processing or spreadsheets. |



## Advanced Adjustments [Adjustment menu]

Independent setting and saving of color adjustment are available for each FineContrast mode.

### • To select an appropriate mode for images

✓: Adjustment/setting available    -: Factory setting

| Icon | Function    | FineContrast mode |      |      |
|------|-------------|-------------------|------|------|
|      |             | Custom            | sRGB | Text |
|      | Brightness  | ✓                 | ✓    | ✓    |
|      | Temperature | ✓                 | -    | ✓    |
|      | Gain        | ✓                 | -    | -    |
|      | Reset       | ✓                 | -    | ✓    |

| Menu            | Description   | Adjustment range   |
|-----------------|---|--|
| Brightness<br>  | To adjust the full screen brightness as desired   | 0 to 100%  |
|                 | <b>NOTE</b> <ul style="list-style-type: none"> <li>You can also adjust the brightness by pressing ◀ or ▶*1.</li> <li>You can also adjust the brightness by pressing  or *2.</li> </ul>  |  |
| Temperature<br> | To select a color temperature   | "OFF," "5000K," "6500K," or "9300K"  |
|                 | <b>NOTE</b> <ul style="list-style-type: none"> <li>The values shown in the Kelvin (K) are available only as reference.</li> <li>While color temperature is adjusted, &lt;Gain&gt; is adjusted automatically according to the color temperature.</li> <li>When &lt;Gain&gt; is set, color temperature setting is disabled, and is set to "OFF".</li> </ul> |  |
| Gain<br>        | To adjust red, green, and blue to a desired color tone respectively   | 0 to 100%<br>Adjust the respective brightness of red/green/blue to make a desired color tone. Display an image with white or gray background for adjustment. |
|                 | <b>NOTE</b> <ul style="list-style-type: none"> <li>Values shown in percentage are available only as reference.</li> <li>The &lt;Temperature&gt; setting invalidates this setting. The &lt;Gain&gt; setting varies with color temperature.</li> </ul>  |  |
| Reset<br>       | To reset the color settings of the selected FineContrast mode to the default settings.  |  |

### • To set/adjust color

- Choose <Color> from the Adjustment menu, and press .
- Select a desired function from the <Color> menu, and press .  
The selected function menu appears.
- Adjust the selected item with ◀ or ▶, and press .  
The adjustment is completed.

### Attention

- Perform [Range Adjustment] before starting color adjustment for analog input signals.  
Refer to "To adjust color gradation automatically" on page 13.
- The FineContrast mode cannot be changed during color adjustment. Set the FineContrast mode in advance on the color mode screen.
- Wait 30 minutes or more from monitor power on before starting the color adjustment.
- Choose [Reset] from the Color menu to revert to the default setting (factory setting) of the color tone of the FineContrast mode selected.
- The same image may be seen in different colors on multiple monitors due to their monitor-specific characteristics. Make fine color adjustment visually when matching colors on multiple monitors.
- Adjustable functions vary depending on the type of FineContrast mode.

\*1 :Speaker applied model

\*2 :Speaker non-applied model


## 2-4 Off Timer Settings

### • To set monitor power-off time [Off Timer]










This function allows the monitor to automatically turn off after a specified time has passed. This function serves to reduce afterimages caused when the monitor screen is left on for a long time period without use. Use this function when an image is displayed throughout the day.

#### [Off Timer System]


| Timer                     | Monitor          | Power Indicator |
|---------------------------|------------------|-----------------|
| ON time (1H - 23H)        | Operating        | Blue            |
| Last 15 min. in "ON time" | Advance Notice*1 | Flashing blue   |
| "ON time" expired         | Power Off        | Off             |

\*1 When  is pressed during the advance notice period, the monitor continues to operate for additional 90 minutes. Extension of operation time can be set without limitation.

#### [Procedure]

- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose  <Off Timer> from the <Others> menu, and press .  
The <Off Timer> menu appears.
- (3) Select "Enable" with  or , and press .
- (4) Set a monitor ON time (1 to 23 hours) with  or , and press .  
The Off Timer setting is completed.







#### [Resumption Procedure]

Press .

## 2-5 Power Indicator/EIZO Logo Display Setting

### • To turn off the Power indicator while a screen is displayed [Power Indicator Setting]




This function enables to turn off the Power indicator (blue) while a screen is displayed.

- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose  <Power Indicator> from the <Others> menu, and press .  
The <Power Indicator> menu appears.
- (3) Select "Disable" with  or , and press .  
The Power Indicator setting is completed.




### • To display EIZO logo [EIZO Logo Hiding Function]

When this unit is turned on, the EIZO logo appears at the center of the screen. Selection to display or not to display the logo is available with this function.

#### [Procedure]

- (1) Press  to power off the unit.
- (2) Press  again while pressing .  
The EIZO logo does not appear on the screen.

#### [Resetting]

- (1) Press  to power off the unit.
- (2) Press  again while pressing .  
The logo appears again.

#### Attention

- The Off Timer functions even in the power saving mode, but the advance notice is disabled. The monitor power is turned off without advance notice.

#### NOTE

- The Power indicator lights up at power on with the default setting.

#### NOTE

- The logo appears with the default setting.

## 2-6 Locking Buttons

### • To lock operation [Adjustment Lock]

This function locks the buttons to retain the status adjusted or set once.

|                               |  |
|-------------------------------|--|
| Buttons that can be locked    | <ul style="list-style-type: none"> <li>● (Enter button) Adjustments/settings using Adjustment menu</li> </ul>  |
| Buttons that cannot be locked | <ul style="list-style-type: none"> <li>⏻ (Power button)</li> <li>Ⓢ (Input signal selection button)</li> <li>🔊 (Volume control button) or ⏪ ⏩ (Brightness control button)*1</li> <li>☀️ ☀️ (Brightness control button)*2</li> </ul> |

#### [Procedure]

- Press ⏻ to turn off the unit.
- Press ⏻ again while pressing Ⓢ.  
The screen is displayed with the adjustment lock.

#### [Unlocking]

- Press ⏻ to turn off the unit.
- Press ⏻ again while pressing Ⓢ.  
The screen is displayed with the adjustment lock released.

## 2-7 Setting Adjustment menu Display

### • To update menu settings [Menu Position]

#### Menu Position

Adjust the menu position using the following procedure.

- Choose <Others> from the Adjustment menu, and press ●.
- Choose ⏪ <Menu Position> from the <Others> menu, and press ●.  
The <Menu Position> menu appears.
- Select a menu position with ⏪ or ⏩, and press ●.  
The menu position setting is completed.

#### NOTE

- Five positions (center/ upper right/ lower right/ upper left/ lower left) can be selected.

\*1 :Speaker applied model




\*2 :Speaker non-applied model

## 2-8 Viewing Information/Setting Language

- To check viewing information, usage time, etc.

### [Information]

This function allows you to check viewing information, model name, serial number, and usage time of the monitor.






- (1) Choose  <Information> from the Adjustment menu, and press .  
The <Information> menu appears.
- (2) Then, press  to check viewing information, etc.

- To set a language to be displayed [Language]

Select the Adjustment menu language.







### Selectable languages

English/German/French/Spanish/Italian/Swedish/Mandarin/Cantonese/Japanese

- (1) Choose  <Language> menu from the Adjustment menu, and press .  
The <Language> menu appears.
- (2) Select a language with  or , and press .  
The language setting is completed.

## 2-9 Setting BrightRegulator







- [BrightRegulator] to set “Enable” or “Disable” for BrightRegulator.

- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose  < BrightRegulator> from the <Others> menu, and press .  
The BrightRegulator setting window appears.
- (3) Select “Enable” or “Disable” with  or , and press .  
The BrightRegulator setting is completed.

## 2-10 Resumption of Default Setting







- To reset color adjustment [Reset]

Resume the default settings (factory settings) for color adjustment.

- (1) Choose <Color> from the Adjustment menu, and press .
- (2) Choose  <Reset> from the <Color> menu, and press .  
The <Reset> menu appears.
- (3) Select <Reset> with  or , and press .  
The reset operation is completed.

- To reset all settings [Reset]

Reset all adjustments/settings to the factory default settings.

- (1) Choose <Others> from the Adjustment menu, and press .
- (2) Choose  <Reset> from the <Others> menu, and press .  
The <Reset> menu appears.
- (3) Select <Reset> with  or , and press .  
The reset operation is completed.

### NOTE

- The usage time is not always “0” when you purchase the monitor due to factory inspection.

### NOTE

- Be careful not to block the sensor on the lower side of the monitor when using the BrightRegulator function.

### NOTE


- For default settings, refer to “Main default settings (factory settings)” in Specifications Sheet.

# Chapter 3 Connecting Cables


## 3-1 Connecting Two PCs to the Monitor

Two PCs can be connected to the monitor through the DVI-D and the D-Sub mini 15 pin connector on the back of the monitor.

### Connection examples

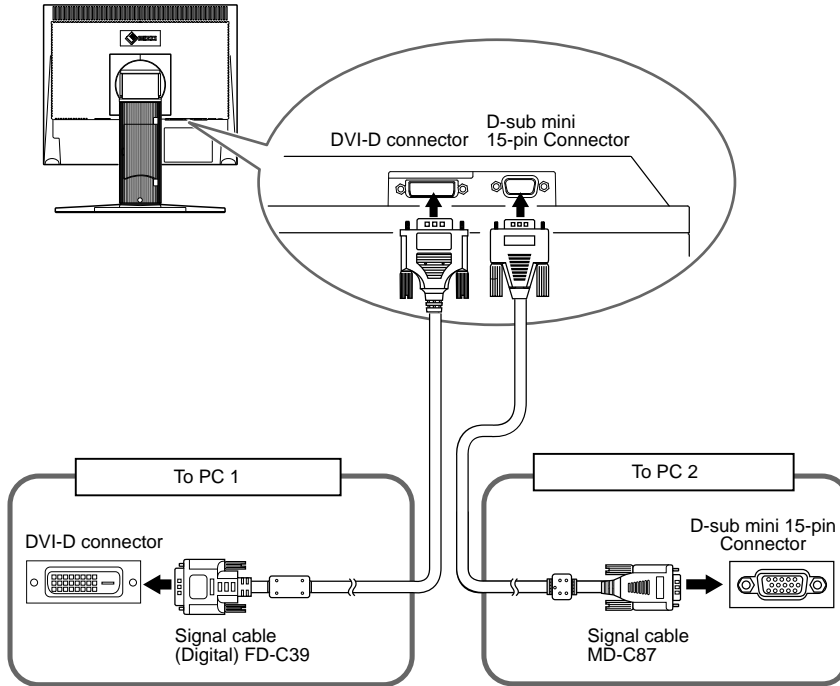

### Selecting input signal

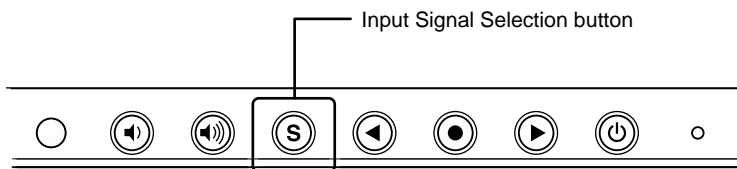

Switch the input signal with (S). Input signal switches each time (S) is pressed. When the signal is switched, the active signal type (Analog or Digital) appears at the top right corner of the screen for two seconds.











#### NOTE

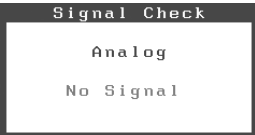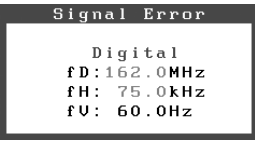- The monitor recognizes the connector through which PC signals are input. When either PC is turned off or enters the power-saving mode, the monitor automatically displays signals of another PC.

# Chapter 4 Troubleshooting

If a problem still remains after applying the suggested remedies, contact your local dealer.

- No-picture problems → See No.1 - No.2.
- Imaging problems → See No.3 - No.11.
- Other problems → See No.12.

| Problems   | Possible cause and remedy   |
|--|---|
| <b>1. No picture</b> <ul style="list-style-type: none"> <li>• Power indicator does not light.</li> </ul>   | <ul style="list-style-type: none"> <li>• Check whether the power cord is connected correctly. If the problem persists, turn off the monitor, and then turn it on again a few minutes later.</li> </ul>  |
| <ul style="list-style-type: none"> <li>• Power indicator is lighting blue.</li> <li>• Power indicator is lighting orange.</li> </ul>   | <ul style="list-style-type: none"> <li>• Check Gain setting. (see page 15)</li> <li>• Operate the mouse or keyboard.</li> </ul>   |
| <b>2. The message below appears.</b> <ul style="list-style-type: none"> <li>• This message appears when no signal is input.</li> </ul>  <p>The image shows a rectangular box with a black border. At the top, it says "Signal Check". Below that, it says "Analog" and "No Signal".</p>   | <p>This message appears when the signal is not input correctly even when the monitor functions properly.</p> <ul style="list-style-type: none"> <li>• The message shown left may appear, because some PCs do not output the signal soon after power-on.</li> <li>• Check whether the PC is turned on.</li> <li>• Check whether the signal cable is connected properly.</li> </ul>   |
| <ul style="list-style-type: none"> <li>• The message below shows that the input signal is out of the specified frequency range. (Such signal frequency is displayed in red.)</li> </ul> <p>Example:</p>  <p>The image shows a rectangular box with a black border. At the top, it says "Signal Error". Below that, it says "Digital" and "fD: 162.0MHz", "fH: 75.0kHz", and "fV: 60.0Hz".</p> | <ul style="list-style-type: none"> <li>• Select an appropriate display mode using the graphics board's utility software. Refer to the manual of the graphics board for details.</li> </ul>  |
| <b>3. Display position is incorrect.</b>  <p>The image shows a square frame representing the display area. The frame is shifted to the right and slightly up, indicating that the displayed image is not centered or properly positioned within the screen's boundaries.</p>  | <ul style="list-style-type: none"> <li>• Adjust image position so that it is displayed properly within the display area using the  &lt;Hor.Position&gt; and  &lt;Ver.Position&gt; adjustment.</li> <li>• If the problem persists, use the graphics board's utility software if available to change the display position.</li> </ul> |
| <b>4. Vertical bars appear on the screen or a part of the image is flickering.</b>  <p>The image shows two side-by-side rectangular frames. The left frame contains several vertical lines of varying heights, representing vertical bars. The right frame contains horizontal lines that appear to be flickering or broken, representing a flickering image.</p>                             | <ul style="list-style-type: none"> <li>• Adjust using  &lt;Clock&gt; from &lt;Screen&gt; menu at the Adjustment menu.</li> </ul>  |
| <b>5. Whole screen is flickering or blurring.</b>  <p>The image shows a rectangular frame containing several horizontal lines. The lines are slightly blurred and have a wavy appearance, indicating that the entire screen is flickering or the image is out of focus.</p>   | <ul style="list-style-type: none"> <li>• Adjust using  &lt;Phase&gt;.</li> </ul>   |
| <b>6. The screen is too bright or too dark.</b>  | <ul style="list-style-type: none"> <li>• Adjust  &lt;Brightness&gt;. (The LCD monitor backlight has a fixed life span. When the screen becomes dark or begins to flicker, contact your local dealer.)</li> </ul>   |
| <b>7. Afterimages appear.</b>  | <ul style="list-style-type: none"> <li>• Use a screen saver or off timer function for a long-time image display.</li> <li>• Afterimages are particular to LCD monitors. Avoid displaying the same image for a long time.</li> </ul>   |

| Problems  | Possible cause and remedy  |
|---|--|
| <b>8. Green/red/blue/white dots or defective dots remain on the screen.</b> | <ul style="list-style-type: none"> <li>• This is due to LCD panel characteristics and is not a failure.</li> </ul>   |
| <b>9. Interference patterns or fingerprints remain on the screen.</b>       | <ul style="list-style-type: none"> <li>• Leave the monitor with a white screen. The symptom may disappear.</li> </ul>  |
| <b>10. The Main menu of Adjustment menu does not start.</b>                 | <ul style="list-style-type: none"> <li>• Check for Adjustment Lock function.</li> </ul>  |
| <b>11. The auto-adjustment function does not work correctly.</b>            | <ul style="list-style-type: none"> <li>• This function does not work when digital signal is input.</li> <li>• This function works correctly when an image is fully displayed over the Windows or Macintosh display area. It does not work properly when an image is displayed only on a part of the screen (DOS prompt window, for example) or when a black background (wallpaper, etc.) is in use.</li> <li>• This function does not work correctly with some graphics boards.</li> </ul> |
| <b>12. No audio output*1</b>  | <ul style="list-style-type: none"> <li>• Check whether &lt;Volume&gt; is set to "0".</li> <li>• Check the settings of the PC and the audio playback software.</li> </ul>   |

\*1: Speaker applied model.

# Chapter 5 Reference

## 5-1 Attaching an Arm (Option)

The stand can be removed and replaced with an arm (or another stand) to be attached to the monitor. Use an arm or stand of EIZO option.

### [Attaching]


**1** Lay the LCD monitor on a soft cloth spread over on a stable surface with the panel surface facing down.

**2** Remove the stand. (Prepare a screwdriver.)

Unscrew the four screws securing the unit and the stand with the screwdriver.

**3** Attach the monitor to the arm or stand.

Secure the monitor to the arm or stand using the screws specified in the user's manual of the arm or stand.

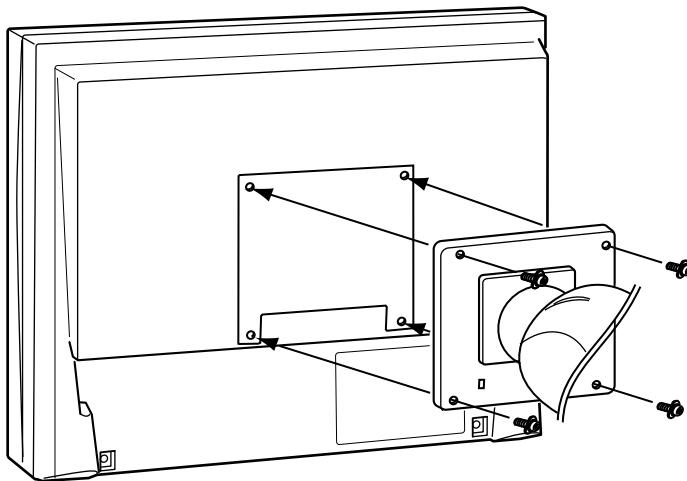

Fixing screws: M4 × 12mm 4 pcs

### Attention

- When attaching an arm or stand, follow the instructions of their user's manual.
- When using another manufacturer's arm or stand, confirm the following in advance and select one conforming to the VESA standard. Use the M4 × 12 screws supplied with this monitor.
  - Clearance between the screw holes: 100 mm × 100 mm
  - Thickness of plate: 2.6 mm
  - Strong enough to support weight of the monitor unit (except the stand) and attachments such as cables.
- Attach an arm or stand to meet the following tilt angles of the monitor.
  - Up 60 degrees, down 45 degrees
  - Up 45 degrees, down 45 degrees (vertical display, 90 degrees clockwise)
- Connect the cables after attaching an arm.
- If you need to remove the EZ-UP stand, turn the panel on the monitor to the left and right a little to appear the four screws positioned under the stand. Then unscrew the four screws.



## 5-2 Power Saving Mode

### ■ Analog input

This monitor complies with the VESA DPMS standard.

#### [Power Saving System]

| PC           |                           | Monitor      | Power Indicator |
|--------------|---------------------------|--------------|-----------------|
| Operating    |                           | Operating    | Blue            |
| Power saving | STAND-BY<br>SUSPENDED OFF | Power saving | Orange          |

#### [Resumption Procedure]

(1) Operate the mouse or keyboard to resume the normal screen.

### ■ Digital input

This monitor complies with the DVI DMPM standard.

#### [Power Saving System]

The monitor enters the power saving mode in five seconds in connection with the PC setting.

| PC          | Monitor      | PowerIndicator |
|-------------|--------------|----------------|
| Operating   | Operating    | Blue           |
| Powersaving | Power saving | Orange         |

#### [Resumption Procedure]

- Operate the mouse or keyboard to resume the normal screen from the PC's power saving mode.

## 5-3 Cleaning

Clean the monitor periodically to keep the monitor clean and extend its life.

### Cabinet

Clean the cabinet with a soft cloth dampened with little mild detergent.

### LCD Panel

- Clean the LCD panel with a soft cloth such as cotton cloth or lens cleaning paper.
- Remove persistent stains gently with a cloth dampened with little water, and then clean the LCD panel again with a dry cloth for better finishing.

#### Attention

- Never use any solvents or chemicals, such as thinner, benzene, wax, alcohol, and abrasive cleaner, which may damage the cabinet or LCD panel.

#### NOTE

- Optional ScreenCleaner is recommended for cleaning the panel surface.

## 5-4 Glossary

### Clock

The analog input monitor needs to reproduce a clock of the same frequency as the dot clock of the graphics system in use, when the analog input signal is converted to a digital signal for image display.

This is called clock adjustment. If the clock pulse is not set correctly, some vertical bars appear on the screen.

### DVI (Digital Visual Interface)

DVI is a digital interface standard. DVI allows direct transmission of the PC's digital data without loss.

This adopts the TMDS transmission system and DVI connectors. There are two types of DVI connectors. One is a DVI-D connector for digital signal input only. The other is a DVI-I connector for both digital and analog signal inputs.

### DVI DMPM (DVI Digital Monitor Power Management)

DVI DMPM is a digital interface power-saving function. The "Monitor ON (operating mode)" and "Active Off (power-saving mode)" are indispensable for DVI DMPM as the monitor's power mode.

### Gain

This is used to adjust each color parameter for red, green and blue. An LCD monitor displays the color by the light passing through the panel color filter. Red, green and blue are the three primary colors. All the colors on the screen are displayed by combining these three colors. The color tone can be changed by adjusting the light intensity (volume) passing through each color's filter.

### Phase

Phase means the sampling timing to convert the analog input signal to a digital signal. Phase adjustment is made to adjust the timing. It is recommended that phase adjustment be made after the clock is adjusted correctly.

### Resolution

The LCD panel consists of numerous pixels of specified size, which are illuminated to form images. The monitor consists of 1280 horizontal pixels and 1024 vertical pixels. At a resolution of 1280 × 1024, all pixels are illuminated as a full screen (1:1).

### sRGB (Standard RGB)

International standard for "color reproduction and color space" among peripheral devices (such as monitors, printers, digital cameras, scanners). sRGB allows Internet users to closely match colors as a simple color matching means for the Internet use.

### Temperature

Color temperature is a method to measure the white color tone, generally indicated in degrees Kelvin. The screen becomes reddish at a low temperature, and bluish at a high temperature, like the flame temperature.

5000K: Slightly reddish white

6500K: Warm white like paper white

9300K: Slightly bluish white

### TMDS (Transition Minimized Differential Signaling)

A signal transmission system for digital interface.

### VESA DPMS (Video Electronics Standards Association - Display Power Management Signaling)

VESA provides the standardization of signals from PC (graphics board) for power saving of PC monitors. DPMS defines the signal status between PC and monitor.

## 5-5 Preset Timing

The following table shows factory preset video timing.

| Mode                    | Dot clock |            | Frequency       |              | Polarity |
|-------------------------|-----------|------------|-----------------|--------------|----------|
|                         |           |            | Horizontal: kHz | Vertical: Hz |          |
| VGA 640x480@60Hz        | 25.2 MHz  | Horizontal | 31.47           | Negative     |          |
|                         |           | Vertical   | 59.94           | Negative     |          |
| VGA 720x400@70Hz        | 28.3 MHz  | Horizontal | 31.47           | Negative     |          |
|                         |           | Vertical   | 70.09           | Positive     |          |
| Macintosh 640x480@67Hz  | 30.2 MHz  | Horizontal | 35              | Negative     |          |
|                         |           | Vertical   | 66.67           | Negative     |          |
| Macintosh 832x624@75Hz  | 57.3 MHz  | Horizontal | 49.73           | Negative     |          |
|                         |           | Vertical   | 74.55           | Negative     |          |
| Macintosh 1152x870@75Hz | 100.0 MHz | Horizontal | 68.68           | Negative     |          |
|                         |           | Vertical   | 75.06           | Negative     |          |
| Macintosh 1280x960@75Hz | 126.2 MHz | Horizontal | 74.76           | Positive     |          |
|                         |           | Vertical   | 74.76           | Positive     |          |
| PC-9801 640x400@56Hz    | 21.0MHz   | Horizontal | 24.83           | Negative     |          |
|                         |           | Vertical   | 56.42           | Negative     |          |
| PC-9821 640x400@70Hz    | 25.2 MHz  | Horizontal | 31.5            | Negative     |          |
|                         |           | Vertical   | 70.15           | Negative     |          |
| VESA 640x480@72Hz       | 31.5 MHz  | Horizontal | 37.86           | Negative     |          |
|                         |           | Vertical   | 72.81           | Negative     |          |
| VESA 640x480@75Hz       | 31.5 MHz  | Horizontal | 37.5            | Negative     |          |
|                         |           | Vertical   | 75              | Negative     |          |
| VESA 800x600@56Hz       | 36.0 MHz  | Horizontal | 35.16           | Positive     |          |
|                         |           | Vertical   | 56.25           | Positive     |          |
| VESA 800x600@60Hz       | 40.0 MHz  | Horizontal | 37.88           | Positive     |          |
|                         |           | Vertical   | 60.32           | Positive     |          |
| VESA 800x600@72Hz       | 50.0 MHz  | Horizontal | 48.08           | Positive     |          |
|                         |           | Vertical   | 72.19           | Positive     |          |
| VESA 800x600@75Hz       | 49.5 MHz  | Horizontal | 46.88           | Positive     |          |
|                         |           | Vertical   | 75              | Positive     |          |
| VESA 1024x768@60Hz      | 65.0 MHz  | Horizontal | 48.36           | Negative     |          |
|                         |           | Vertical   | 60              | Negative     |          |
| VESA 1024x768@70Hz      | 75.0 MHz  | Horizontal | 56.48           | Negative     |          |
|                         |           | Vertical   | 70.07           | Negative     |          |
| VESA 1024x768@75Hz      | 78.8 MHz  | Horizontal | 60.02           | Positive     |          |
|                         |           | Vertical   | 75.03           | Positive     |          |
| VESA 1152x864@75Hz      | 108.0 MHz | Horizontal | 67.5            | Positive     |          |
|                         |           | Vertical   | 75              | Positive     |          |
| VESA 1280x960@60Hz      | 108.0 MHz | Horizontal | 60              | Positive     |          |
|                         |           | Vertical   | 60              | Positive     |          |
| VESA 1280x1024@60Hz     | 108.0 MHz | Horizontal | 63.98           | Positive     |          |
|                         |           | Vertical   | 60.02           | Positive     |          |
| VESA 1280x1024@75Hz     | 135.0 MHz | Horizontal | 79.98           | Positive     |          |
|                         |           | Vertical   | 75.03           | Positive     |          |

### Attention

- Display position may be deviated depending on the PC connected, which may require screen adjustment using Adjustment menu.
- If a signal other than those listed in the table is input, adjust the screen using the Adjustment menu. However, screen display may still be incorrect even after the adjustment.
- When interlace signals are used, the screen cannot be displayed correctly even after screen adjustment using the Adjustment menu.



Congratulations!

The display you have just purchased carries the TCO'03 Displays label. This means that your display is designed, manufactured and tested according to some of the strictest quality and environmental requirements in the world. This makes for a high performance product, designed with the user in focus that also minimizes the Impact on our natural environment.

Some of the features of the TCO'03 Display requirements:

#### Ergonomics

- Good visual ergonomics and image quality in order to improve the working environment for the user and to reduce sight and strain problems. Important parameters are luminance, contrast, resolution, reflectance, colour rendition and image stability.

#### Energy

- Energy-saving mode after a certain time - beneficial both for the user and environment
- Electrical safety

#### Emissions

- Electromagnetic fields
- Noise emissions

#### Ecology

- The products must be prepared for recycling and the manufacturer must have a certified environmental management system such as EMAS or ISO 14000
- Restrictions on
  - chlorinated and brominated flame retardants and polymers
  - heavy metals such as cadmium, mercury and lead.

The requirements included in this label have been developed by TCO Development in co-operation with scientists, experts, users as well as manufacturers all over the world. Since the end of the 1980s TCO has been involved in influencing the development of IT equipment in a more user-friendly direction. Our labeling system with displays in 1992 and is now requested by users and IT-manufacturers all over the world.

**For more information, please visit  
[www.tcodevelopment.com](http://www.tcodevelopment.com)**

For U.S.A. , Canada, etc. (rated 100-120 Vac) Only

## FCC Declaration of Conformity

**We, the Responsible Party**

EIZO NANAOTECHNOLOGIES INC.

5710 Warland Drive, Cypress, CA 90630

Phone: (562) 431-5011

**declare that the product**

Trade name: EIZO

Model: FlexScan S1701, S1721, S1731, S1901, S1911,  
S1921, S1931

**is in conformity with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note**

Use the attached specified cable below or EIZO signal cable with this monitor so as to keep interference within the limits of a Class B digital device.

- AC Cord
- Shielded Signal Cable (D-SUB mini 15 pin - D-SUB mini 15 pin, the enclosed signal cable)
- Stereo mini-jack cable (Speaker applied model)

## Canadian Notice

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### **Hinweise zur Auswahl des richtigen Schwenkarms für Ihren Monitor**

Dieser Monitor ist für Bildschirmarbeitsplätze vorgesehen. Wenn nicht der zum Standardzubehör gehörige Schwenkarm verwendet wird, muss statt dessen ein geeigneter anderer Schwenkarm installiert werden. Bei der Auswahl des Schwenkarms sind die nachstehenden Hinweise zu berücksichtigen:

Der Standfuß muß den nachfolgenden Anforderungen entsprechen:

- a) Der Standfuß muß eine ausreichende mechanische Stabilität zur Aufnahme des Gewichtes vom Bildschirmgerät und des spezifizierten Zubehörs besitzen. Das Gewicht des Bildschirmgerätes und des Zubehörs sind in der zugehörigen Bedienungsanleitung angegeben.
- b) Die Befestigung des Standfusses muß derart erfolgen, daß die oberste Zeile der Bildschirmanzeige nicht höher als die Augenhöhe eines Benutzers in sitzender Position ist.
- c) Im Fall eines stehenden Benutzers muß die Befestigung des Bildschirmgerätes derart erfolgen, daß die Höhe der Bildschirmmitte über dem Boden zwischen 135 – 150 cm beträgt.
- d) Der Standfuß muß die Möglichkeit zur Neigung des Bildschirmgerätes besitzen (max. vorwärts: 5°, min. nach hinten  $\geq 5^\circ$ ).
- e) Der Standfuß muß die Möglichkeit zur Drehung des Bildschirmgerätes besitzen (max.  $\pm 180^\circ$ ). Der maximale Kraftaufwand dafür muß weniger als 100 N betragen.
- f) Der Standfuß muß in der Stellung verharren, in die er manuell bewegt wurde.
- g) Der Glanzgrad des Standfusses muß weniger als 20 Glanzeinheiten betragen (seidenmatt).
- h) Der Standfuß mit Bildschirmgerät muß bei einer Neigung von bis zu 10° aus der normalen aufrechten Position kippstabil sein.

### **Hinweis zur Ergonomie :**

Dieser Monitor erfüllt die Anforderungen an die Ergonomie nach EK1-ITB2000 mit dem Videosignal, 1280 × 1024 RGB analog, 0,7 Vp-p und mindestens 60,0 Hz Bildwiederholfrequenz, non interlaced. Weiterhin wird aus ergonomischen Gründen empfohlen, die Grundfarbe Blau nicht auf dunklem Untergrund zu verwenden (schlechte Erkennbarkeit, Augenbelastung bei zu geringem Zeichenkontrast.)

„Maschinenlärminformations-Verordnung 3. GPSGV:

Der höchste Schalldruckpegel beträgt 70 dB(A) oder weniger gemäss EN ISO 7779“

**Recycle Auskunft**

Die Rücknahme dieses Produktes nach Nutzungsende übernimmt EIZO in Deutschland zusammen mit dem Partner eds-r gmbh rucknahmesysteme. Dort werden die Geräte in ihre Bestandteile zerlegt, die dann der Wiederverwertung zugeführt werden. Um einen Abholtermin zu vereinbaren und die aktuellen Kosten zu erfahren, benutzen Sie bitte folgende Rufnummer: 02153-73 35 00. Weitere Informationen finden Sie auch unter der Internet-Adresse: <http://www.eizo.de>.

**Recycling Information for customers in Switzerland:**

All recycling information is placed in the SWICO's website.  
<http://www.swico.ch>

**Recycling-Information für Kunden in der Schweiz:**

Alle Informationen zum Thema Recycling finden Sie auf der Homepage des Branchenverbandes SWICO.  
<http://www.swico.ch>

**Renseignements de recyclage pour les clients en Suisse:**

Vous trouvez tous les renseignements pour le sujet de recyclage sur la page WEB de l'UNION DE BRAN CHE SWICO.  
<http://www.swico.ch>

**Recycling Information for customers in USA:**

All recycling information is placed in the EIZO Nanao Technologies, Inc's website.  
<http://www.eizo.com>

**Återvinnings information för kunder i Sverige:**

All information om återvinning finns på Eizo Europe AB:s hemsida:  
<http://www.eizo.se>



**EIZO NANA O CORPORATION**

153 Shimokashiwano, Hakusan, Ishikawa 924-8566 Japan  
Phone: +81 76 277 6792 Fax: +81 76 277 6793

**EIZO EUROPE AB**

Lovangsvagen 14 194 61, Upplands Väsby, Sweden  
Phone: +46 8 594 105 00 Fax: +46 8 590 91 575

<http://www.eizo.com>

5th Edition-April, 2010

03V21903E1  
(U.M-S1701)